 


Lenco

SCD-38 USB

**PORTABLE FM RADIO WITH
CD/MP3-PLAYER AND USB
CONNECTION**

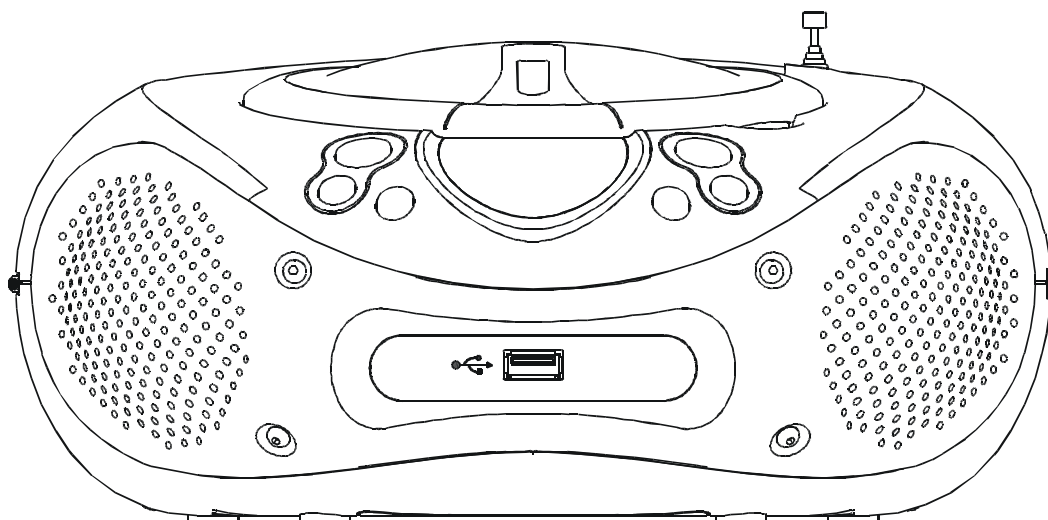

**User manual
English**

Lenco recommends attentive reading of the manual before operating the unit.
For information and support, www.lenco.eu

V1.0

Table of content

Box content	2
Important notes	3
Maintenance	4
1. Exploring the unit & basic controls.....	5
1.1. Parts on the front view side of the player	5
1.2. Parts on the left view side of the player	6
1.3. Parts on the rear view side of the player.....	7
1.4. Parts on the right view side of the player	7
2. Connecting to a power source	8
2.1. Connecting the AC power cord	8
2.2. Using the player on batteries	8
3. Playing media	8
3.1. Playing a CD or MP3.....	8
3.2. Repeat play	9
3.3. Programmed play	9
3.4. Connecting a USB device	9
3.5. Playing other audio source through your set	10
4. Listening to the radio	10
5. Trouble shooting	11
6. Specification.....	12
7. Recycling	12

Dear Customer

Thank you for purchasing this Portable FM radio with CD/MP3-player and USB connection. When opening the box for the first time, please check whether all the accessories are present. Before connecting parts and power, please carefully read the user manual and always keep these instructions close by your Portable FM radio with CD/MP3-player and USB connection.

Box content

1x Main unit

1x User manual

Note: if some parts are missing please contact your dealer as soon as possible.

Important notes

Safety

- As the laser beam used in the CD player section may be harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it further.

Placement

- Do not leave the player in a location near a heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an incl unstable place.
- Do not place anything within 1 inch of the back of the cabinet. The ventilation holes must not be covered for the player to operate properly and prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring wound watches away from the player to prevent possible damage from the magnets.

Power Sources

- For battery operation, use 6 size "C" batteries. Lenco recommends using A brand batteries for longer life & results.
- When the batteries will not be used for a few weeks or more, remove them to avoid damage that can be caused by battery leakage or corrosion.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

If at any time in the future you should need to dispose of this product please note that: All batteries and accumulators need to be removed from this product (Removal of Waste Batteries and Accumulators).

WARNING:

- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- WARNING: Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc).
- WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled

with liquids, such as vases, shall not be placed on apparatus.

- **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- The USB memory stick should be plug in the unit directly. USB extension cable should not be used to avoid failing of data transferring and interference caused.
- Lenco recommends keeping the packaging to avoid damages during future transportation.

CD

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, not leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or stickers on the CD, nor scratch the CD.
- After playing, store the CD in its case. If there is a scratch, dirt or fingerprints on the CD, it may cause a tracking error or skipping.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains .As the disconnect devices is the mains plug of apparatus.
- The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.
- This CD player is designed to be played on a stable no vibration position. If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

Scratched discs

If your disc is badly scratched, it will not play. You may be able to repair the disc if you buy a disc polisher.

Maintenance

Cleaning the Lens

 
If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner and blower or carefully wipe it with a soft dry cloth.

Cleaning the Cabinet


Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

1. Exploring the unit & basic controls

1.1. Parts on the front view side of the player

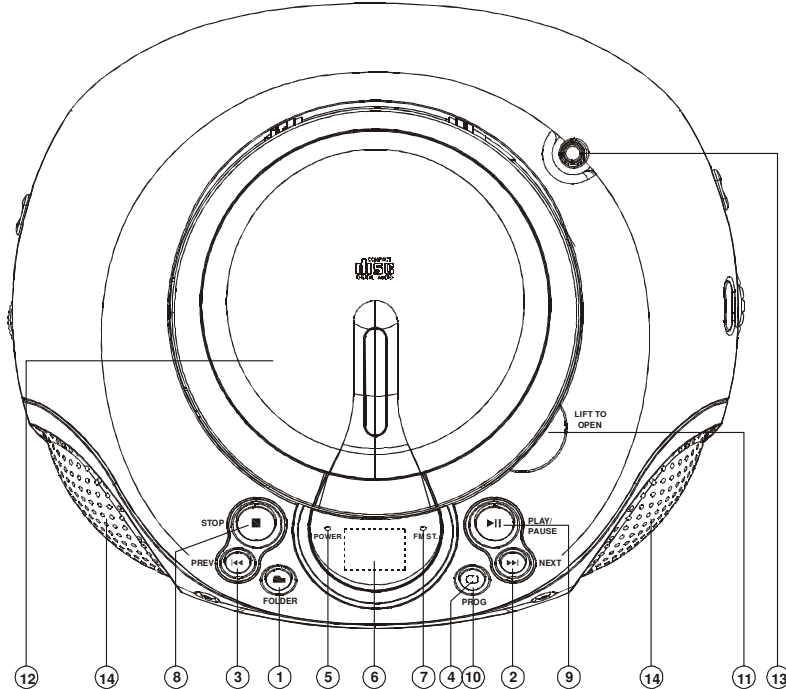


1. Folder: During MP3/WMA playback, press FOLDER button to flash the current folder SN. . When flashing folder SN. , press FOLDER button to select next folder and play the first track in the folder.
2. NEXT: skip next track; Press and hold the button to fast forward play during play mode
3. PREV: skip to beginning of the current or previous track; Press and hold the button to fast backward play during play mode
4. Repeat: repeat a track, folder or whole media
5. Power LED indicator LED on: main unit is on
LED off: main unit is off
6. Display
7. FM ST LED indicator
LED on: main unit is in FM stereo mode
LED off: main unit is in FM mono mode
8. Stop: Press this to stop playback
9. Play/pause: Press this to play CD or USB (When the unit is in CD/USB Mode, see function switch 16). When pressed in play mode, pause mode is set. Press again to resume playback.
10. PROG: Programming your desired tracks and its sequence to play
11. OPEN/CLOSE: open or close CD door
12. CD door
13. FM antenna
14. Speakers

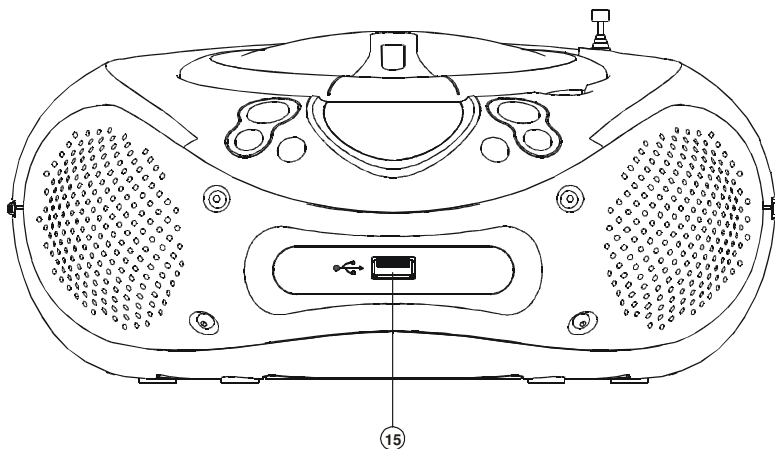 


15. USB socket: To connect a USB device

 1.2. Parts on the left view side of the player

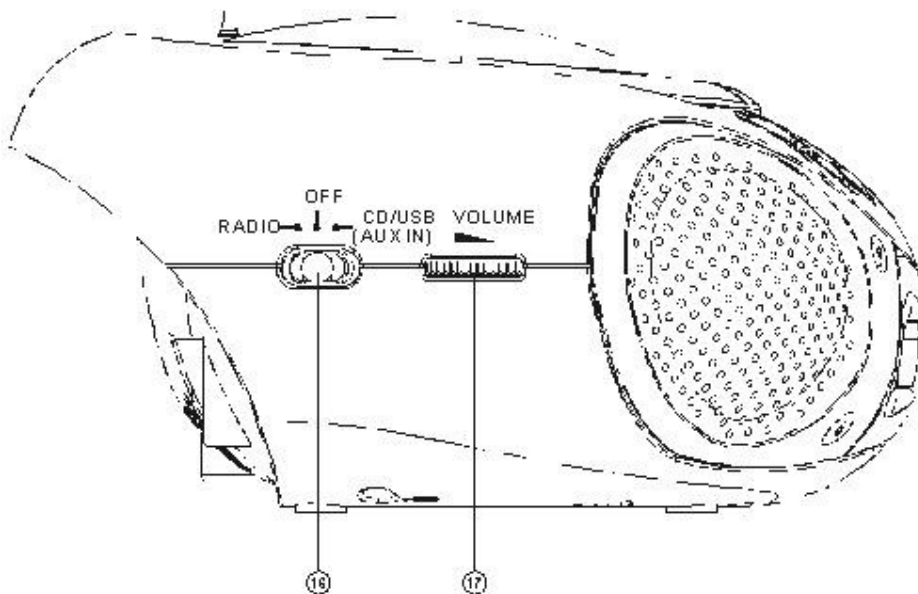


16. Function switch
 17. VOLUME control: increase/decrease the volume

 1.3. Parts on the rear view side of the player

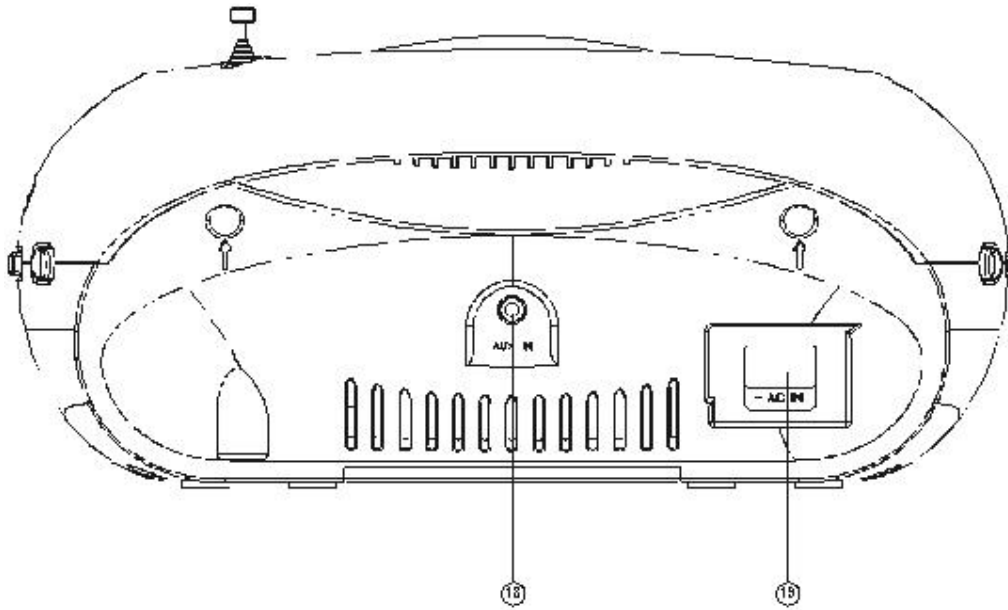

- 18. AUX IN socket (Input audio signal)
- 19. AC IN socket

 1.4. Parts on the right view side of the player

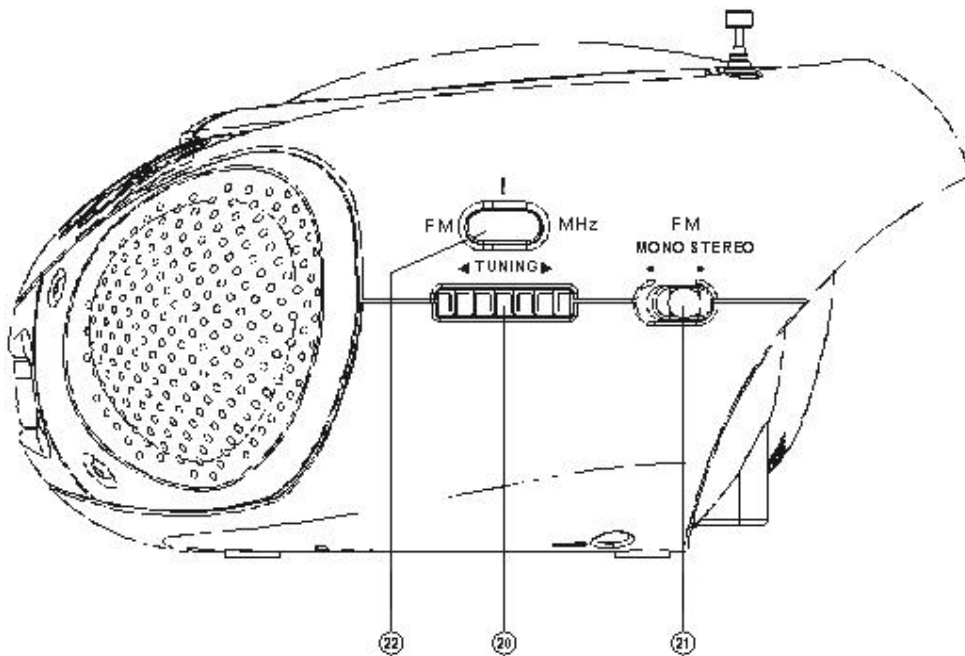

- 20. Tuning control
- 21. FM MONO/STEREO Switch
- 22. FM frequency dial

2. Connecting to a power source

You can use the AC power or batteries as a power source.

Note: Batteries are not included

2.1. Connecting the AC power cord

 
Insert one end of the supplied AC power cord into the AC IN socket located at the rear view of the player, and the other end to the wall outlet.

Note: If the plug of the AC power cord does not match your outlet, do not force it. Reverse it and try again. The plug is polarized and only fits one way into the wall outlet and rear of the set.

2.2. Using the player on batteries

Loading the batteries:

1. Roll over the apparatus so that the battery door becomes visible.
2. Use one finger to press the sagging block towards the arrow on the battery cover and then push the cover to the arrow until hearing a click, now hold the front edge of the cover and turn up to remove it.
3. Place 6 size "C" batteries into the battery compartment according to the direction of "+" and "-" electrode marked inside the battery compartment.
4. Make the buckle of the cover towards to buckle groove and make the 4 legs of the cover face to the leg grooves to wedge the cover onto the player and then push it into previous position (close).

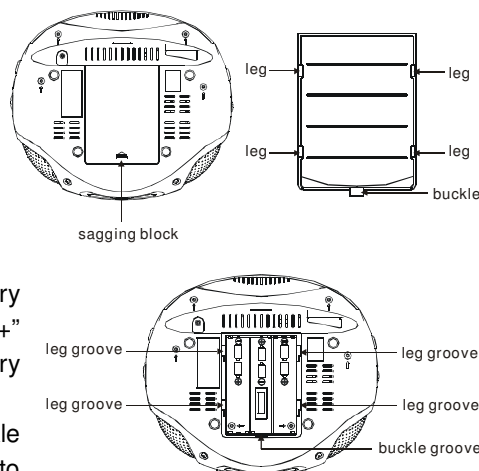

Important: Remove the AC power cord while operating the unit on batteries.

Notes:

 
- Lenco recommends the use of A-Brand batteries.
- Replace the batteries when the POWER lamp dims or when the player stops operating.
- If the CD does not play, this means the batteries are almost empty.

3. Playing media

3.1. Playing a CD or MP3

- Open the CD door and place a disc in the CD compartment with the label side up.
- Close the CD door.
- Slide the FUNCTION switch to CD/USB/AUX IN position.
- For operating the CD/MP3 see chapter 1.

NOTE: "no" will show in the display if there is no disc in the CD compartment or if there is a disc error.

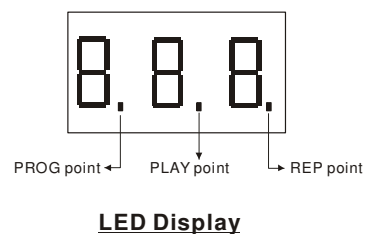

3.2. Repeat play

- Press REPEAT button once, it will flash REP point, and play the current track over and over.
- Press REPEAT button twice, it will flash folder SN. And display track SN. Alternatively, and play the tracks in the current folder over and over.
- Press REPEAT button thrice, it will display REP point, and repeat playing all tracks in order.

3.3. Programmed play

You can make a program of up to 20 tracks in the order you want them to be played.

- During disc or USB playback, press STOP button to stop playback.
- Press PROGRAM button to display and flash P.01.
- Press PREV/NEXT button to select your desired track, and press PROGRAM button to confirm.

Note: For MP3/WMA , you can quickly select your desired tracks to program such as: press FOLDER button to display and flash the current folder SN. and press FOLDER button to select your desired track in the folder.

- REPEAT step 3 to program other tracks till you finish programming(up to 20 tracks)
- Press the PLAY/PAUSE button to start programmed play.

Play all the programmed tracks repeatedly

In program play mode, press the REPEAT button once to repeat the current programmed track; press the REPEAT button twice to repeat all programmed tracks.

Change the current program

Just create a new program following the programming procedure.

Cancel programmed play

Press the STOP button twice or slide the FUNCTION switch to OFF position.

3.4. Connecting a USB device

1. Connect the USB device to the USB terminal of the main unit.
2. Slide the function switch into CD/USB/AUX IN position.
3. The unit will read the content that is available on the USB device automatically.
4. Operation is the same as when playing a CD.

Notes:

- When disc play, then insert the USB, the unit will automatically switch to play USB.
- When USB play, then place the disc, the unit will automatically switch to play the disc.
- When the existence of USB and the disc, the unit will play USB at first.
- The USB memory stick should be plug in the unit directly. USB extension cable should not be used to avoid failing of data transferring and interference caused.

3.5. Playing other audio source through your set

You can enjoy the music of any external audio source through the set (Via 3,5mm st. jack).

Note: 3,5mm stereo jack cable is not included.

1. Insert the audio cable with one end into the HEADPHONES jack or LINE OUT jack of your external audio source, and the other end into the AUX IN jack of the set.
2. Slide the FUNCTION switch to CD/USB/AUX IN position.
3. Slide the FUNCTION switch to OFF position after use.

NOTE: When connecting an audio player to the set while the set is playing CD, the set will exit CD mode and switch to AUX IN mode automatically.

4. Listening to the radio

1. Slide the FUNCTION switch to RADIO position, the POWER lamp will turn on.
2. Slide the FM MONO/STEREO switch to the proper position that you prefer.
3. Tune into the station you prefer using the TUNING control.
4. Slide the FUNCTION switch to OFF position to turn off the radio.

5. Trouble shooting

Please refer the following instruction when there are some problems with the unit.

If the problem still exists, please consult your dealer.

	Problem	Remedy
General	The unit does not turn on	Check the AC power cord.
		Check the batteries (inserted correctly and new)
		Check the FUNCTION switch.
	There is no sound	Adjust the volume
CD Player	"- - -" or "nl" Appears in the display	Is the disk format supported?
	CD does not play	Is the CD compartment closed
		Take out the CD and leave the CD DOOR open for about an hour to dry moisture condensation
		Make sure the CD is not scratched
		Clean the CD
		Make sure the FUNCTION switch is at CD/USB/AUX IN position
		If connected; disconnect the audio cable from the AUX IN jack.
	The sound drips out	Clean the CD, or replace it if the CD is badly damaged
		Place the player in a location free from vibration
		Check if your batteries are okay
	CD does not play while the radio continues to play on battery power	It is normal since the radio uses less power than the CD player
Radio	The sound is weak or has poor quality	Replace all the batteries with new ones, or bring the set near a window, or rotate the set/antenna

6. Specification

Power source	AC 230V DC 9V (6 size "C" batteries)
Power consumption	< 1 W (in standby mode: function switch is in OFF position) ≤ 9 W(during operation: function switch is in non OFF position)
Speakers	4 ohms
Output power	1.0W/channel
Dimensions	259 X 223 X 118
Weight	1295g(without batteries)
Playable disc type and format	Type: CD-DA , CD-R , CD-RW Format: CD , MP3 , WMA
Max tracks folders	1: USB Max files : 999 Max folder: 128 Max files in folder :128 2:MP3 CD,WMA CD Max folder + file: 511 (e.g. 1folder + 510 songs; 2 folders + 509 songs ; etc) Max folder : 256
Radio Frequency range	FM:87.5-108 MHz

7. Recycling



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

Removal of Waste Batteries and Accumulators Directive

If at any time in the future you should need to dispose of this product please note that: All batteries and accumulators need to be removed from this product (Removal of Waste Batteries and Accumulators).